


# Checking Your Current Firmware


**Step 1.** To check the current firmware on your DVR, first you need to access the main menu. To do this right click on the main screen of your DVR. This will bring up the on screen menu, then scroll to the bottom and left click main menu.

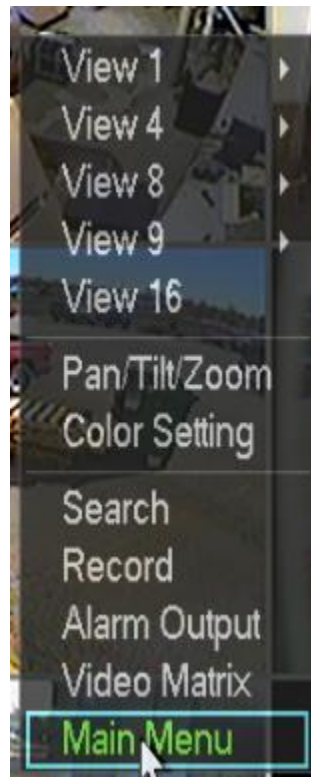

**Step 2.** Once your inside the main menu you will notice the Info button in the top middle of the window. Left click that to access the DVR's information.



**Step 3.** Once your inside the information screen, you will be presented with a couple other options, for now select the **Version** button. This will bring you into the menu where your firmware number is located.

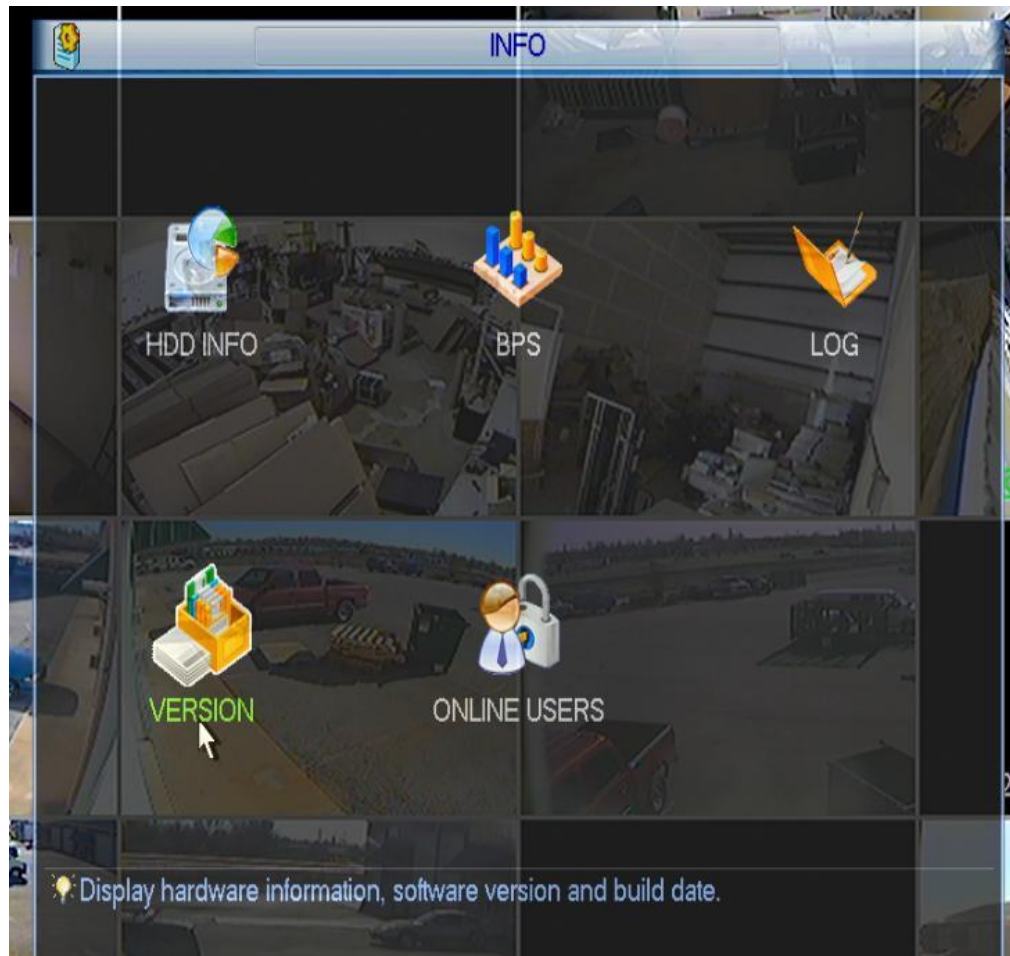

**Step 4.** Once your inside the Version window you will see information about your DVR. The Firmware number and Build Date are the two things we need to focus on. The Firmware number is next to the word System and the Build Date is located directly below it.



## VERSION

Channels 16

Alarm In 16

Alarm Out 6

System 2.608.0000.6

Build Date 10-18-2011

Web 2.1.7.35

Serial No. PA1DF03001137

### UPGRADE

If you need to upgrade system now, please insert USB upgrade disk, then press the start button to start upgrade. Don't shut down the power during upgrade!

Start