

Creating a custom task in PSS

Preface:


What is a custom task in PSS and what does it do? A task is basically another name for a “Custom View”. A custom task eliminates the burdensome duty of manually inserting each camera into its desired box. By creating a task, you can simply tell PSS to automatically open up all cameras at one time and they will all be in your pre-selected position. You can also have the program automatically start the task upon opening up the program as well. This feature comes in very handy for hardcore PSS users who require the use of several different viewing options. For example, in one part of the day you may find it necessary to view a certain 4 cameras while another part of the day you find it necessary to view another 8 cameras. Making custom preset views, or “tasks”, makes this quick and simple.

Before you start:

Make sure you have completed the “getting setup with PSS” tutorial before you attempt to try this tutorial.

Step 1: Get into the Scheme Task Config screen:

To do this simply click on the setting manage icon to the right of the screen. Several selections will appear, be sure to click on “Scheme Task Config”

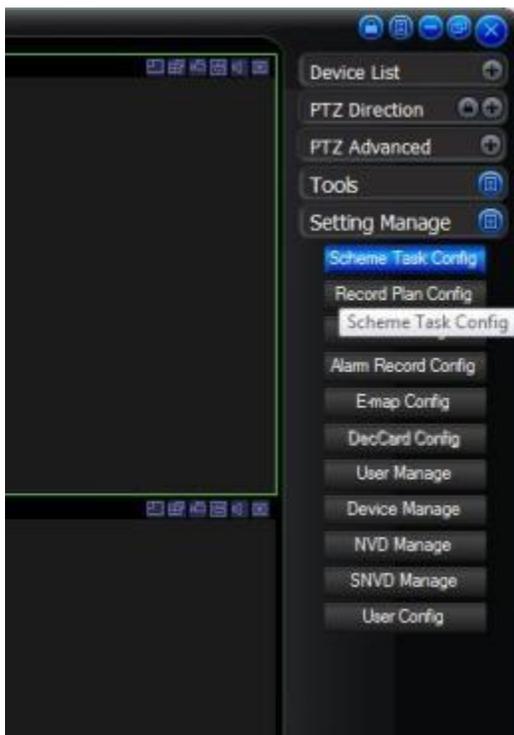


the "Monitor Item list" that I have my other cameras selected as well and they are as follows:

Window Square 1: CAM 2

Window Square 2: CAM3

Window Square 3: CAM 5

Window Square 4: CAM 10

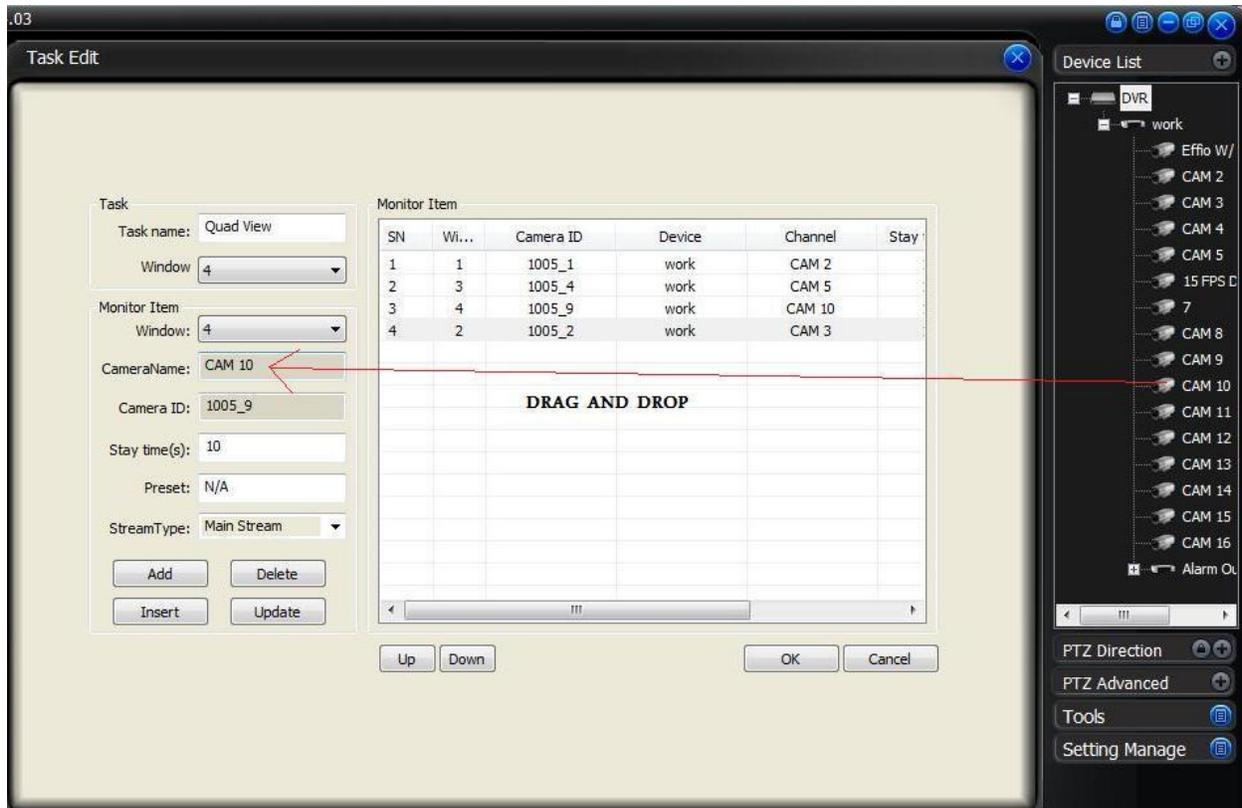

Once you get your task information inputted how you want it, click OK.

Step 3: Open up the task:

Once you are back at the main screen, click on the Task Button at the bottom and select your task.:



Step 4: How to make a task start as soon as you open up the PSS software. (Optional)

You may wish it to be necessary to have the task automatically start as soon as you open up the PSS program. To do this, simply click on the Config icon at the bottom of the screen>then click option.

Near the middle of the screen you will see an area that says “Auto Start Task”, be sure to check the checkbox. Also, be sure to select your task under the task name.

Option

System basic setup:

Language: English *

* Login all devices * Load decode card when system boots up * Auto start record plan
* Auto pop up alarm information dialogue * Auto login PSS * Auto run PSS when system boots up.
Hot Key Setup: Real-time monitor window ii Ctrl + F * Auto register service listening port: 38888
Displayed items in right bar: PTZ Direction * Preview Picture: System default open mode
Display alarm item in interface: External Alarm Motion Detect * Get all devices' running status.

Record basic setup:

Snapshot picture path: C:\PSS\Pic ... Device free minimum capacity(MB): 2000
Picture File Name Rule: {RECTYPE}_{Y4}{M2}{D2}{H2}{m2}{S2}_{DEVID}_{CHNI} ... Record Time(Minute): 5
Recorded file path: C:\PSS\Record ...
Record File Name Rule: {RECTYPE}_{Y4}{M2}{D2}{H2}{m2}{S2}_{DEVID}_{CHNI} ...
Downloaded record file name rule: {RECTYPE}_{Y4}{M2}{D2}{H2}{m2}{S2}_{DEVID}_{CHNI} ...

*Auto start monitor setup:

Auto Start Project: Yes/No Project Name: ...
Auto Start Task: Yes/No Task name: Quad View Last Run
 Save last monitor status

Sync time setup:

* Auto sync PC time to device Sync Time becomes valid at: 12:00:00 AM Auto reboot device
Week: Sun. Mon. Tues. Wed. Thurs. Fri. Sat.

Alarm record basic setup:

Alarm record max amount: 1000 Refresh interval: 3 Sec. *
* Use pop-up window to display the alarm video. Alarm video window amount: 4 *
 Add disarming alarm message to the alarm record * Alarm information output port: 39999 *

OK Cancel